



LIQMAX 120S

ALL-IN-ONE LIQUID CPU COOLER



2 Years Warranty

User's Manual

Index

Limited Warranty	1
Specification	2
Part list	3
Intel Installation	4
AMD Installation	17

Limited Warranty

Please read this limited warranty carefully. Warranty is subject to void under following criteria:

1. The serial number label or warranty seal is defaced, modified, or removed.
2. Taking apart of the product and/or modification of any component or cable without ENERMAX's written authorization.
3. Ignoring connector's faulty-insertion-prevention design by attaching a connector to a device under incorrect orientation.
4. Damage caused by natural phenomena or uncontrollable forces, such as lightning, flooding, fire, earthquake, or misuse, abuse, negligence, accident, wear and tear, mishandling, misapplication.

This ENERMAX Technology Corporation product is warranted to be free from defects in material and workmanship for a period of two (2) years from the date of purchase. ENERMAX Technology Corporation agrees to repair or replace the product, at its own option and at no charge, if, during the warranty period, it is returned to nearest ENERMAX Technology Corporation subsidiary/agent with all shipping charges prepaid and if inspection reveals that the product is defective. Please present the proof of purchase for requesting RMA. Charges for removing or installing the product are excluded under the terms of this warranty agreement. This warranty shall not apply to any product, which has been subject to connection to a faulty power source, alteration, negligence, or accident, or to any product, which has been installed other than in accordance with these instructions. In no event shall ENERMAX Technology Corporation, or its subsidiaries, or agents be liable for damages for a breach of warranty in an amount exceeding the purchase price of this product.

If you are uncertain whether or not your ENERMAX liquid cooler is defective, please contact your dealer/reseller for support!

Web Site: <http://www.enermax.com>

E-mail: enermax@enermax.com.tw

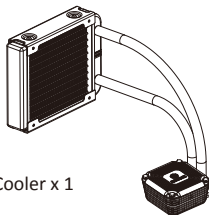
ENERMAX Technology Corporation, 15F-2, No. 888, Jing-Guo Road, Taoyuan City (330), Taiwan (R.O.C.), Tel. +886-3-316-1675, Fax. +886-3-346-6640

©2013 ENERMAX Technology Corporation. All rights reserved. Specifications are subject to change without prior notice. Actual product and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others. Reproduction in any manner without the written permission of ENERMAX is strictly forbidden.

Specification

Model		ELC-LM120S-HP	ELC-LM120S-TAA
Cold Plate	Material	Copper	
Pump	Bearing	Ceramic Bearing	
	MTBF	50,000 hrs	
	Motor Speed	2300 rpm	
	Rated Voltage	12V	
	Rated Current	0.3A	
Radiator	Dimension	156 x 120 x 32 mm	
	Material	Aluminium	
Tube	Material	FEP	
	Length	310 mm	
Weight (w/o fan)		505 g	
Bracket	Compatibility	Intel® LGA 775/1150/1155/1156/1366/2011 AMD® AM2/AM2+/AM3/AM3+/FM1/FM2	
Fan	Dimension	120 x 120 x 25 mm	
	Bearing	Twister Bearing	
	MTBF	100,000 hrs	
	Speed	600-1300/2000/2500 rpm	
	Rated Voltage	12V	
	Rated Current	0.13A/0.27A/0.45A	0.13A/0.27A/0.45A
	Air Flow	28.6~60.3/88.9/111.0 CFM 48.5~102.4/150.9/188.7 m³/h	24.5~51.6/84.6/105.7 CFM 41.6~87.7/143.7/179.7 m³/h
	Static Pressure	0.8~1.7/4.7/7.4 mm-H ₂ O	0.8~1.5/2.4/3.7 mm-H ₂ O
	Noise Level	15~21.5/27/30 dBA	14~20/27/30 dBA
	LED	N/A	12x Blue LED
	Connector	4 pin PWM	

Part list




A Cooler x 1




B Fan x 1




C Intel Bracket x 2



D AMD Bracket x 2



E Intel Back Plate x 1



F AMD Back Plate x 1



G Case Screw x 4



H Fan Screw x 8



I Stand-off x 4



J Stand-off for Intel LGA 2011 x 4



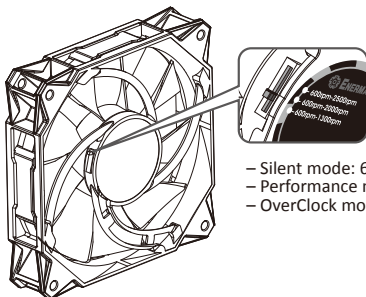
K Nut Setter x 1



L Thermal Grease x 1

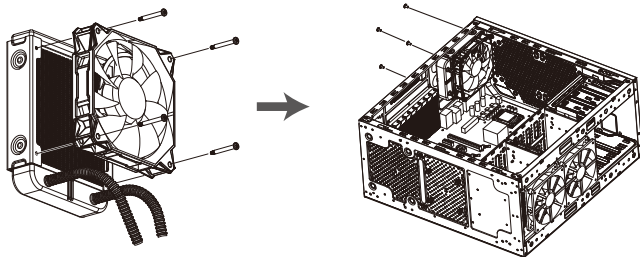
Intel Installation

Step 1



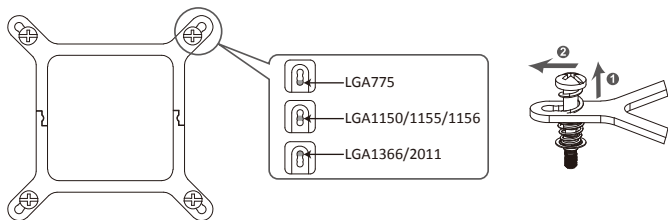
- Silent mode: 600~1300 rpm
- Performance mode: 600~2000 rpm
- OverClock mode: 600~2500 rpm

- EN** Choose your desired max. fan speed by adjusting the speed control at the fan hub.
- DE** Wählen Sie die gewünschte Maximaldrehzahl des Lüfters über den kleinen Regler an der Lüfternabe.
- FR** Déterminez la vitesse de rotation maximale du ventilateur en réglant le dispositif central.
- IT** Selezionare la velocità massima della ventola attraverso il regolatore di velocità nella parte posteriore della ventola
- ES** Seleccione la velocidad máxima del ventilador a través del control de velocidad en la parte trasera del ventilador
- PL** Według wymagań systemu wybierz maksymalną prędkość wentylatora za pomocą małego przełącznika z tyłu wentylatora.
- TN** 於扇框中心控制鈕選擇PWM風扇所需最高轉速
- CN** 在扇框中心设有PWM风扇调速开关，可自由调整风扇转速
- JP** ファン中心部分に搭載されているスイッチで、お好みに合った回転範囲を選択して下さい。
- KR** 팬 허브에서 속도 조정 장치를 조절하여 원하는 최대 팬 속도를 선택하십시오.
- ID** Pilih kecepatan kipas yg anda inginkan dengan menyesuaikan kontrol kecepatan pada fan hub.
- RU** Выберите скорость вращения вентилятора маленьким переключателем на обратной стороне вентилятора.

Step
2

- EN** Attach the fan and the radiator to the chassis
- DE** Schrauben Sie den Lüfter und den Radiator am Gehäuse fest.
- FR** Fixez le ventilateur et le radiateur sur le châssis
- IT** Fissare la ventola e il radiatore al case
- ES** Fijar el ventilador y el radiador a la caja
- PL** Zamontuj wentylator i radiator na obudowie komputerowej.
- TN** 安裝風扇及散熱排於機殼
- CN** 将风扇以及散热排安装在机箱上
- JP** ファンをラジエーターに設置してケースに取り付けて下さい。
- KR** 팬과 방열기를 PC 케이스에 부착하십시오.
- ID** Pasang kipas dan radiator ke casing
- RU** Закрепите вентилятор и радиатор на корпусе.

Step 3



EN Please select the appropriate hole for your CPU socket.

DE Bitte wählen Sie die passende Bohrung für Ihre CPU-Plattform

FR Sélectionnez l'emplacement approprié pour votre socket de votre CPU

IT Scegliere il foro appropriato per il socket della vostra CPU.

ES Seleccione el agujero apropiado para el socket de la CPU.

PL Wybierz odpowiednie otwory montażowe w zależności od platformy procesora.

TN 依系統CPU腳位選擇適合孔位

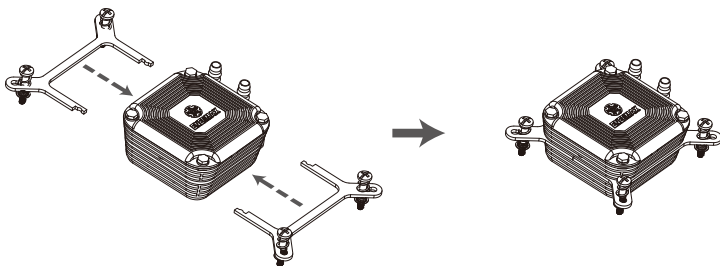
CN 可依据CPU安装位置 选择与其相对应的孔位

JP CPUのソケットに合ったネジ穴を使用して下さい。

KR CPU 소켓에 맞는 나사 홀을 선택하십시오.

ID Pilih lubang yang sesuai dengan socket CPU anda

RU Пожалуйста, выберите соответствующие отверстия для вашего процессора.

Step
4

EN Insert the Intel brackets into the pump

DE Montieren Sie die Intel-Halterungen an der Pumpe.

FR Insérez les supports Intel dans la pompe

IT Inserire le staffe Intel nella pompa

ES Fijar el soporte de montaje Intel a la bomba

PL Zamontuj przeznaczone do procesorów Intel wsporniki mocujące na pompę.

TN 將Intel支架固定於水泵上

CN 將intel支架 固定在水泵上

JP Intel用ブラケットをポンプに取り付けて下さい。

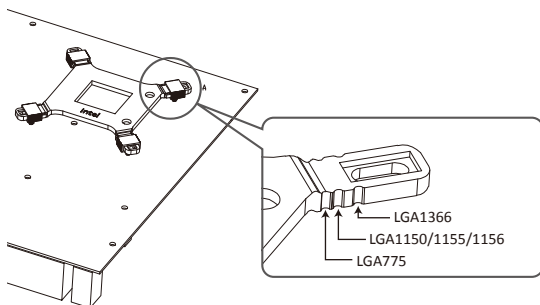
KR Intel 브라켓을 펌프에 삽입하십시오.

ID Masukkan bracket intel ke pompa

RU Закрепите крепление «Intel» на насосе.

Step 5-A1

*** LGA775/1150/1155/1156/1366**



Intel

EN Install the Intel back plate onto the back of motherboard.

DE Befestigen Sie die Intel-Backplate an der Rückseite des Mainboards.

FR Installez la plaque arrière Intel sous la carte-mère

IT Installare la piastra posteriore Intel sul retro della scheda madre.

ES Instalar la placa posterior Intel en la parte trasera de la placa madre

PL Przymocuj płytę mocującą (Backplate) pod płytą główną.

TN 將Intel強化背板安裝於主板背面

CN 將Intel 強化背板安裝在主板背面

JP Intel 用バックプレートをマザーボードの裏側に設置して下さい。

KR Intel 백 플레이트를 마더보드 후면에 설치하십시오.

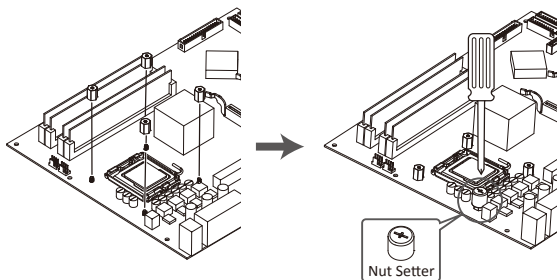
ID Pasang plat belakang intel ke belakang motherboard

RU Установите крепёжную пластину «Intel» к обратной стороне на материнской плате.

Step
5-A2

* LGA775/1150/1155/1156/1366

Intel



EN Tighten the stand-off to the motherboard

DE Schrauben Sie die Backplate mit den Abstandshaltern am Mainboard fest.

FR Serrez la vis du support à la carte-mère

IT Fissare i montanti alla scheda madre

ES Fijar los tornillos de pilar a la placa madre

PL Przykręć płytę mocującą za pomocą nakrętek dystansowych.

TN 將銅柱固定於主板上

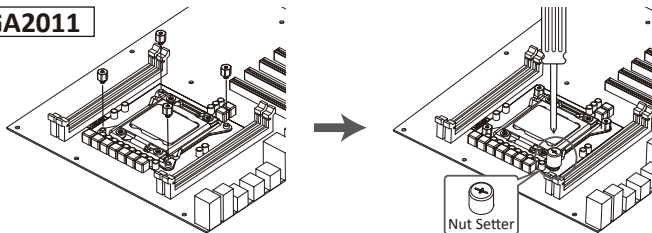
CN 將銅柱固定在主板的相应位置上

JP 専用ネジを使用して、バックプレートをマザーボードに固定してください。

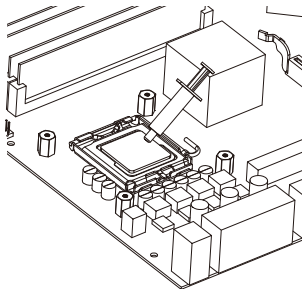
KR 마더보드 지지대를 마더보드에 고정하십시오.

ID Kencangkan stand off ke motherboard

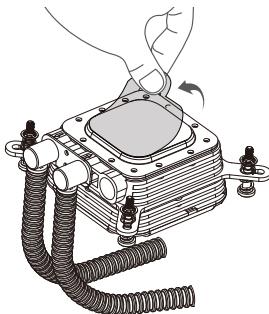
RU Затяните гайки на материнской плате.

**Step
5-B**
*** LGA2011**


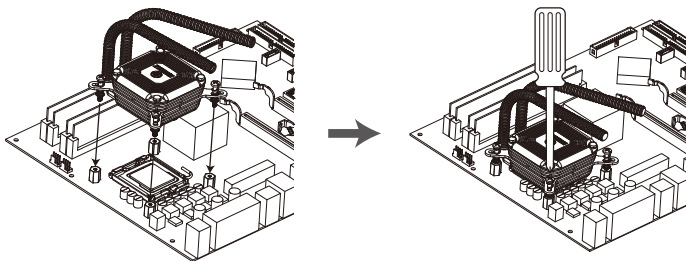
- EN** Tighten the Intel LGA 2011 stand-off to the motherboard
 *Intel LGA 2011 socket does not require the back plate.
- DE** Schrauben Sie die Backplate mit den passenden LGA2011-Abstandshaltern am Mainboard fest.
 *Die Montage für den Intel-LGA-2011-Sockel bedarf keiner Back-Plate
- FR** Serrez la vis du support Intel LGA2011 à la carte-mère
 *socket Intel LGA2011 n'a pas besoin de plaque arrière
- IT** Fissare i montanti per Intel LGA 2011 alla scheda madre
 *Il socket Intel LGA 2011 non ha bisogno della piastra posteriore
- ES** Fije los tornillos de pilar para Intel LGA 2011 a la placa madre
 *El zócalo Intel LGA 2011 no necesita la placa posterior
- PL** Przykręć płytę mocującą za pomocą przeznaczonych do platformy LGA2011 nakrętek dystansowych.
 *gniazdo platformy Intel LGA 2011 nie wymaga tylnej płyty
- TN** 將LGA2011銅柱固定於主板上
 *安裝Intel LGA 2011不需背板
- CN** 將LGA2011銅柱固定在主板的相应位置上
 *安裝Intel LGA 2011不需背板
- JP** Intel LGA 2011の場合、2011専用ネジを使用しバックプレートをマザーボードに固定して下さい。
 *Intel LGA 2011の取り付けにはバックプレートを使用しないため
- KR** Intel LGA 2011 지지대를 마더보드에 고정하십시오.
 *Intel LGA 2011은 백 플레이트가 필요 없으며
- ID** Kencangkan Intel LGA 2011 stand off ke motherboard
 *Soket Intel LGA 2011 Tidak memerlukan penutup bagian belakang
- RU** Затяните гайки «Intel LGA 2011» на материнской плате.
 *Intel LGA 2011 не нуждается в крепёжной пластине. Пожалуйста

Step
6

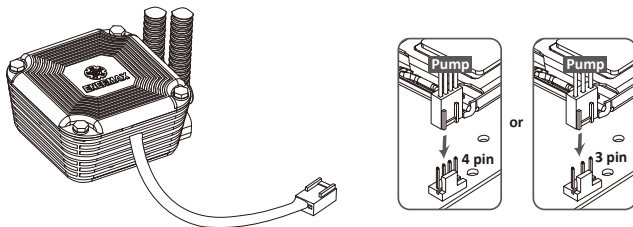
- EN** Apply the thermal grease evenly on the CPU surface
- DE** Verteilen Sie gleichmäßig eine dünne Schicht Wärmeleitpaste auf der CPU-Oberfläche.
- FR** Appliquez une couche uniforme de pâte thermique sur la surface du CPU
- IT** Applicare in modo uniforme la pasta termica sulla superficie della CPU
- ES** Aplicar de forma uniforme la pasta térmica en la superficie de la CPU
- PL** Nałóż równomiernie cienką warstwę pasty termoprzewodzącej na metalową osłonę na procesorze.
- TN** 將散熱膏均勻的塗抹於CPU表面
- CN** 请在CPU表面均与塗抹散热硅脂
- JP** サーマルグリスをCPUの表面に均一になるよう薄く塗って下さい。
- KR** CPU 표면에 그리스를 평평히 퍼 바르십시오.
- ID** Oleskan secara merata thermal pasta ke permukaan CPU
- RU** Нанесите термопасту равномерно на поверхность процессора.

**Step
7**

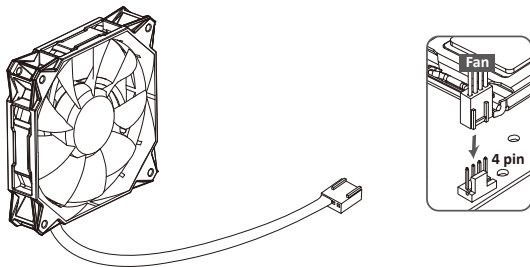
- EN** Remove the protect film from the cold-plate
- DE** Entfernen Sie die Schutzfolie von der Kühlplatte der Pumpe.
- FR** Retirez le film protecteur de la plaque-froide
- IT** Rimuovere la pellicola di protezione dalla piastra di raffreddamento
- ES** Quite la película de protección del bloque de refrigeración
- PL** Zdjąć folię ochronną z bloku wodnego.
- TN** 取下水冷頭保護貼膜
- CN** 使用时请将水冷头保护膜取下
- JP** コールドプレートの保護フィルムを外して下さい。
- KR** 쿨드 플레이트의 보호 필름을 제거하십시오.
- ID** Lepaskan pita pelindung dari plat pendingin
- RU** Пожалуйста, удалите защитную крышку с охлаждающей пластины

Step
8

- EN** Place the pump on the CPU and tighten the spring screws until all four corners are secured
- DE** Platzieren Sie die Pumpe auf der CPU und drehen Sie die Federschrauben fest bis alle vier Seiten fixiert sind.
- FR** Placez la pompe sur le CPU et serrez les vis à ressort jusqu'à ce que les quatre coins soient bien fixés
- IT** Posizionare la pompa sulla CPU e fissare le viti fino a che tutti e quattro gli angoli siano fissati.
- ES** Coloque la bomba en la CPU y apriete los tornillos hasta que las cuatro esquinas estén fijadas.
- PL** Umieść pompę na procesorze i przykręć wszystkie cztery śrubki sprężyste.
- TN** 將水泵至於CPU上並鎖緊四邊彈簧螺絲
- CN** 將水泵置於CPU上並確認四邊的彈簧螺絲拧紧
- JP** 専用ネジを使用して水冷ポンプをCPUの上に固定して下さい。
- KR** CPU 에 펌프를 놓고 펌프의 네 코너가 단단히 고정 될 때까지 스프링 나사를 고정하십시오.
- ID** Tempatkan pompa pada CPU dan kencangkan keempat sekrup sampai keempat sudut aman
- RU** Установите насос на процессоре и затяните все 4 гайки.

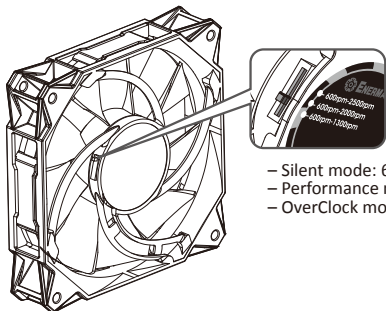
Step
9

- EN** Connect the pump power connector to the motherboard
- DE** Schließen Sie den Stromstecker der Pumpe am Mainboard an.
- FR** Branchez le connecteur d'alimentation de la pompe à la carte-mère
- IT** Collegare il connettore di alimentazione della pompa alla scheda madre
- ES** Conecte el cable de la bomba a la placa madre
- PL** Podłącz wtyczkę do zasilania pompy do płyty głównej.
- TN** 連接水泵電源於主板
- CN** 请将水泵电源与主板相应供电电口连接
- JP** 水冷ポンプのコネクターをマザーボードに接続して下さい。
- KR** 펌프 전원 커넥터를 마더보드에 연결하십시오.
- ID** Hubungkan konektor daya pompa ke motherboard
- RU** Пожалуйста, подключите разъем питания насоса к материнской плате.

Step
10

- EN** Connect the fan connector to the motherboard
- DE** Schließen Sie den 4-Pin-PWM-Stecker des Lüfters am Mainboard an.
- FR** Branchez le connecteur du ventilateur à la carte-mère
- IT** Collegare il connettore della ventola alla scheda madre
- ES** Conecte el conector del ventilador a la placa madre
- PL** Podłącz wtyczkę 4-pin PWM wentylatora do płyty głównej.
- TN** 連接風扇電源於主板
- CN** 请将风扇电源与主板上的相应供电口连接
- JP** ファンコネクタをマザーボードに接続して下さい。
- KR** 팬 커넥터를 마더보드에 연결하십시오.
- ID** Hubungkan konektor kipas ke motherboard
- RU** Пожалуйста, подключите разъем вентилятора к материнской плате.

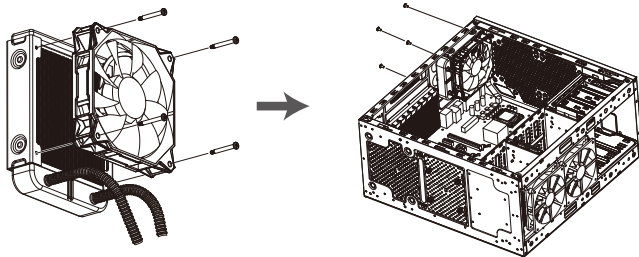
AMD Installation

Step
1

- Silent mode: 600~1300 rpm
- Performance mode: 600~2000 rpm
- OverClock mode: 600~2500 rpm

- EN** Choose your desired max. fan speed by adjusting the speed control at the fan hub.
- DE** Wählen Sie die gewünschte Maximaldrehzahl des Lüfters über den kleinen Regler an der Lüfternabe.
- FR** Déterminez la vitesse de rotation maximale du ventilateur en réglant le dispositif central.
- IT** Selezionare la velocità massima della ventola attraverso il regolatore di velocità nella parte posteriore della ventola
- ES** Seleccione la velocidad máxima del ventilador a través del control de velocidad en la parte trasera del ventilador
- PL** Według wymagań systemu wybierz maksymalną prędkość wentylatora za pomocą małego przełącznika z tyłu wentylatora.
- TN** 於扇框中心控制鈕選擇PWM風扇所需最高轉速
- CN** 在扇框中心设有PWM风扇调速开关，可自由调整风扇转速
- JP** ファン中心部分に搭載されているスイッチで、お好みに合った回転範囲を選択して下さい。
- KR** 팬 허브에서 속도 조정 장치를 조절하여 원하는 최대 팬 속도를 선택하십시오.
- ID** Pilih kecepatan kipas yg anda inginkan dengan menyesuaikan kontrol kecepatan pada fan hub.
- RU** Выберите скорость вращения вентилятора маленьким переключателем на обратной стороне вентилятора.

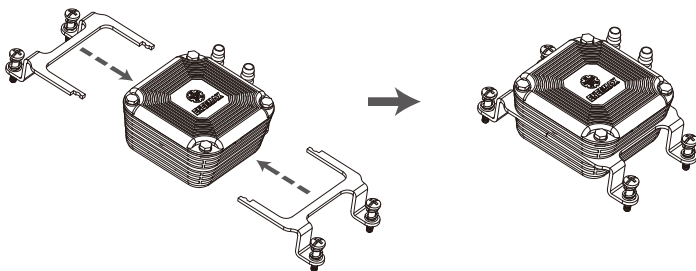
Step
2



AMD

- EN** Attach the fan and the radiator to the chassis
- DE** Schrauben Sie den Lüfter und den Radiator am Gehäuse fest.
- FR** Fixez le ventilateur et le radiateur sur le châssis
- IT** Fissare la ventola e il radiatore al case
- ES** Fijar el ventilador y el radiador a la caja
- PL** Zamontuj wentylator i radiator na obudowie komputerowej.
- TN** 安裝風扇及散熱排於機殼
- CN** 将风扇以及散热排安装在机箱上
- JP** ファンをラジエーターに設置してケースに取り付けて下さい。
- KR** 팬과 방열기를 PC 케이스에 부착하십시오.
- ID** Pasang kipas dan radiator ke casing
- RU** Закрепите вентилятор и радиатор на корпусе.

Step 3



AMD

EN Insert the AMD brackets into the pump

DE Montieren Sie die AMD-Halterungen an der Pumpe.

FR Insérez les supports AMD dans la pompe

IT Inserire le staffe AMD nella pompa

ES Fijar el soporte de montaje AMD a la bomba

PL Zamontuj przeznaczone do procesorów AMD wsporniki mocujące na pompę.

TN 將AMD支架固定於水泵上

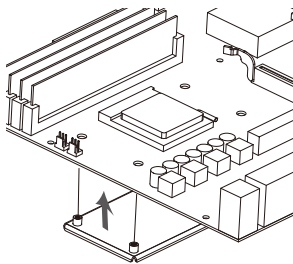
CN 將AMD支架固定在水泵上

JP AMD用ブラケットをポンプに取り付けて下さい。

KR AMD 브라켓을 펌프에 삽입하십시오.

ID Masukkan bracket AMD ke pompa

RU Закрепите крепление «AMD» на насосе.

Step
4**AMD**

EN Install the AMD back plate onto the back of motherboard.

DE Befestigen Sie die AMD-Backplate an der Rückseite des Mainboards.

FR Installez la plaque arrière AMD sous la carte-mère

IT Installare la piastra posteriore AMD sul retro della scheda madre.

ES Instalar la placa posterior AMD en la parte trasera de la placa madre

PL Przymocuj płytę mocującą (Backplate) pod płytą główną.

TN 將AMD強化背板安裝於主板背面

CN 將AMD強化背板安裝在主板背面

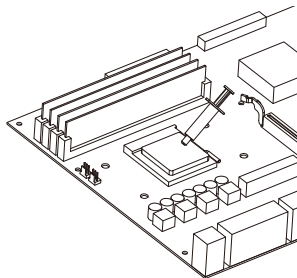
JP AMD用バックプレートをマザーボードの裏側に設置して下さい。

KR AMD 백 플레이트를 마더보드 후면에 설치하십시오.

ID Pasang plat belakang AMD ke belakang motherboard

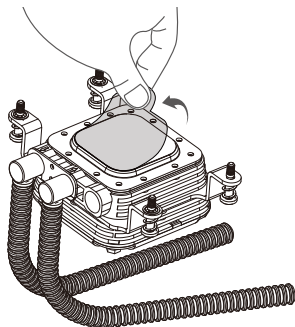
RU Установите крепёжную пластину «AMD» к обратной стороне на материнской плате.

Step 5



- EN** Apply the thermal grease evenly on the CPU surface
- DE** Verteilen Sie gleichmäßig eine dünne Schicht Wärmeleitpaste auf der CPU-Oberfläche.
- FR** Appliquez une couche uniforme de pâte thermique sur la surface du CPU
- IT** Applicare in modo uniforme la pasta termica sulla superficie della CPU
- ES** Aplicar de forma uniforme la pasta térmica en la superficie de la CPU
- PL** Nałożyć równomiernie cienką warstwę pasty termoprzewodzącej na metalową osłonę na procesorze.
- TN** 將散熱膏均勻的塗抹於CPU表面
- CN** 请在CPU表面均匀与涂抹散热硅脂
- JP** サーマルグリスをCPUの表面に均一になるよう薄く塗って下さい。
- KR** CPU 표면에 그리스를 평평히 펴 바르십시오.
- ID** Oleskan secara merata thermal pasta ke permukaan CPU
- RU** Нанесите термопасту равномерно на поверхность процессора.

Step
6



AMD

EN Remove the protect film from the cold-plate

DE Entfernen Sie die Schutzfolie von der Kühlplatte der Pumpe.

FR Retirez le film protecteur de la plaque-froide

IT Rimuovere la pellicola di protezione dalla piastra di raffreddamento

ES Quite la película de protección del bloque de refrigeración

PL Zdjąć folię ochronną z bloku wodnego.

TN 取下水冷頭保護貼膜

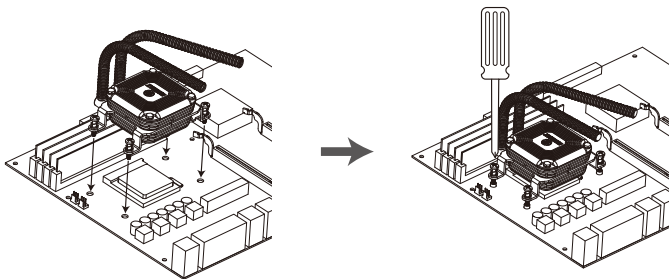
CN 使用时请将水冷头保护贴膜取下

JP コールドプレートの保護フィルムを外して下さい。

KR 쿨드 플레이트의 보호 필름을 제거하십시오.

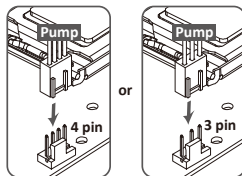
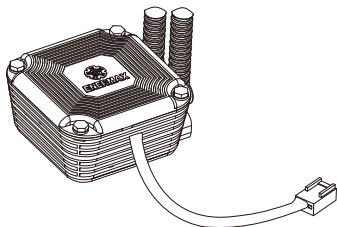
ID Lepaskan pita pelindung dari plat pendingin

RU Пожалуйста, удалите защитную крышку с охлаждающей пластины

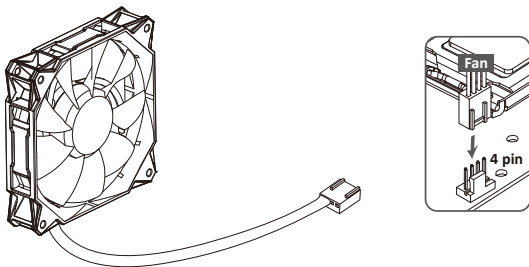
Step
7

AMD

- EN** Place the pump on the CPU and tighten the spring screws until all four corners are secured
- DE** Platzieren Sie die Pumpe auf der CPU und drehen Sie die Federschrauben fest bis alle vier Seiten fixiert sind.
- FR** Placez la pompe sur le CPU et serrez les vis à ressort jusqu'à ce que les quatre coins soient bien fixés
- IT** Posizionare la pompa sulla CPU e fissare le viti fino a che tutti e quattro gli angoli siano fissati.
- ES** Coloque la bomba en la CPU y apriete los tornillos hasta que las cuatro esquinas estén fijadas.
- PL** Umieść pompę na procesorze i przykręć wszystkie cztery śrubki sprężyste.
- TN** 將水泵至於CPU上並鎖緊四邊彈簧螺絲
- CN** 将水泵置于CPU上并确认四边的弹簧螺丝拧紧
- JP** 専用ネジを使用して水冷ポンプをCPUの上に固定して下さい。
- KR** CPU 에 펌프를 놓고 펌프의 네 코너가 단단히 고정 될 때까지 스프링 나사를 고정하십시오.
- ID** Tempatkan pompa pada CPU dan kencangkan keempat sekrup sampai keempat sudut aman
- RU** Установите насос на процессоре и затяните все 4 гайки.

Step
8**AMD**

- EN** Connect the pump power connector to the motherboard
- DE** Schließen Sie den Stromstecker der Pumpe am Mainboard an.
- FR** Branchez le connecteur d'alimentation de la pompe à la carte-mère
- IT** Collegare il connettore di alimentazione della pompa alla scheda madre
- ES** Conecte el cable de la bomba a la placa madre
- PL** Podłącz wtyczkę do zasilania pompy do płyty głównej.
- TN** 連接水泵電源於主板
- CN** 请将水泵电源与主板相应供电口连接
- JP** 水冷ポンプのコネクターをマザーボードに接続して下さい。
- KR** 펌프 전원 커넥터를 마더보드에 연결하십시오.
- ID** Hubungkan konektor daya pompa ke motherboard
- RU** Пожалуйста, подключите разъем питания насоса к материнской плате.

Step
9

- EN** Connect the fan connector to the motherboard
- DE** Schließen Sie den 4-Pin-PWM-Stecker des Lüfters am Mainboard an.
- FR** Branchez le connecteur du ventilateur à la carte-mère
- IT** Collegare il connettore della ventola alla scheda madre
- ES** Conecte el conector del ventilador a la placa madre
- PL** Podłącz wtyczkę 4-pin PWM wentylatora do płyty głównej.
- TN** 連接風扇電源於主板
- CN** 请将风扇电源与主板上的相应供电口连接
- JP** ファンコネクタをマザーボードに接続して下さい。
- KR** 팬 커넥터를 마더보드에 연결하십시오.
- ID** Hubungkan konektor kipas ke motherboard
- RU** Пожалуйста, подключите разъем вентилятора к материнской плате.



LIQMAX 120S

ALL-IN-ONE LIQUID CPU COOLER



LIQMAX 120S

ALL-IN-ONE LIQUID CPU COOLER

© 2013 Enermax Technology Corporation. All rights reserved. Technical changes, printing errors and mistakes excepted.

User's Manual